

Adapter for pylon ground
resistance measurement

C.A 6474



User's manual



CAUTION - DANGER! Read the User Manual.

In these operating instructions, failure to follow or carry out instructions preceded by this symbol may result in personal injury or damage to the device and the installations.



Instrument fully protected by double insulation or reinforced insulation.



The rubbish bin with a line through it means that in the European Union, the product must undergo selective disposal for the recycling of electric and electronic material, in compliance with Directive WEEE 2002/96/EC.



Earth terminal.

DEFINITION OF MEASUREMENT CATEGORIES

- Measurement category IV corresponds to measurements taken at the source of low-voltage installations.
- Measurement category III corresponds to measurements on building installations.
- Measurement category II corresponds to measurements taken on circuits directly connected to low-voltage installations.
- Measurement category I corresponds to measurements taken on circuits not directly connected to the network.

Thank you for purchasing this **C.A. 6474 adapter for pylon ground resistance measurement**.

To obtain the best service from your unit:

- **read** these operating instructions carefully,
- **comply** with the precautions for use, that is to say, temperature, humidity, altitude, degree of pollution and site of use.


PRECAUTIONS FOR USE

- Only use the accessories supplied with the C.A 6474.
- Do not use the C.A 6474 or its accessories if they appear damaged.
- Never exceed the protection limit values indicated in the specification or those indicated for the C.A 6472.
- The connection of current sensor leads is the last operation to be carried out before starting measurement. Disconnection of these leads from the instrument is the first operation to be carried out once measurement is finished.
- In general, boots, gloves and insulated mats should be used.

CONTENTS

1. PRESENTATION OF THE INSTRUMENT	4
2. INITIAL OPERATION	6
2.1. Verification of the contents	6
2.2. Description of the accessories	7
2.3. Characteristics label	8
3. PROCEDURE	8
4. TECHNICAL CHARACTERISTICS	8
4.1. Reference conditions	8
4.2. Environmental conditions.....	8
4.3. Electrical characteristics.....	9
4.4. Compliance with international norms.....	9
4.5. Electromagnetic compatibility (EMC)	9
4.6. Mechanical characteristics	9
5. MAINTENANCE	10
5.1. Cleaning	10
5.2. Calibration testing	10
5.3. Repair	10
6. WARRANTY	10
7. TO ORDER	11
7.1. Accessories	11
7.2. Spares	11

1. PRESENTATION OF THE INSTRUMENT

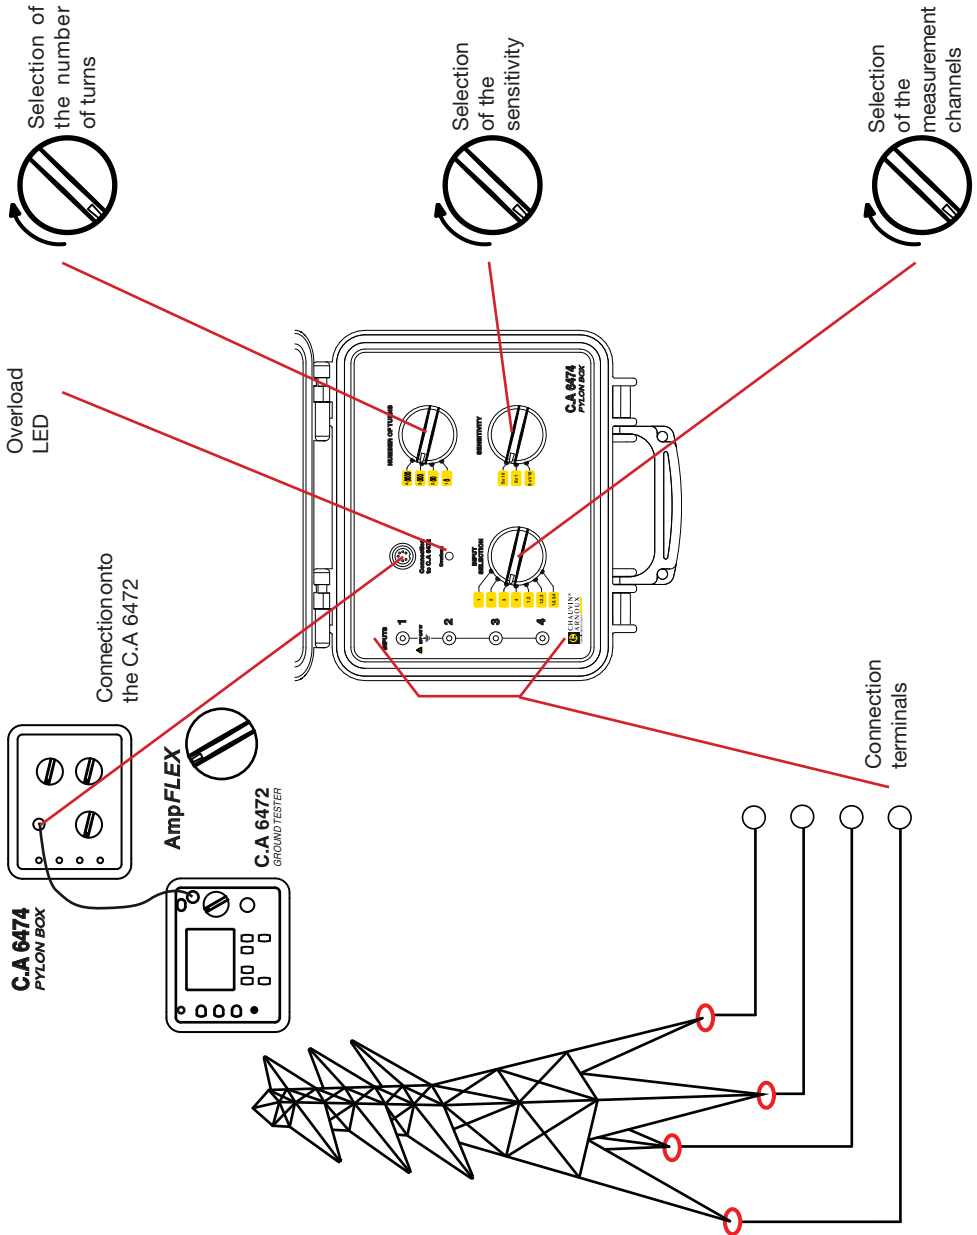


This adapter has been designed for use with the C.A 6472 earth tester. It enables the earthing of electricity pylons to be measured and verified and, in general, any earthing of a system by a bulky structure, the earthing of which cannot be measured by classic means.

2. INITIAL OPERATION

2.1. VERIFICATION OF THE CONTENTS

When unpacking, check that all items have been delivered in line with your order.

The instrument and accessories underwent full mechanical and electronic testing before shipment. All necessary precautions have been taken to ensure you receive the instrument in good condition. It is advisable to make a quick check of the equipment to ensure no damage has occurred during transportation. In the event of damage, immediately notify the carrier of the customary reservations. If you need to ship the instrument to another site, the original packaging should preferably be used.

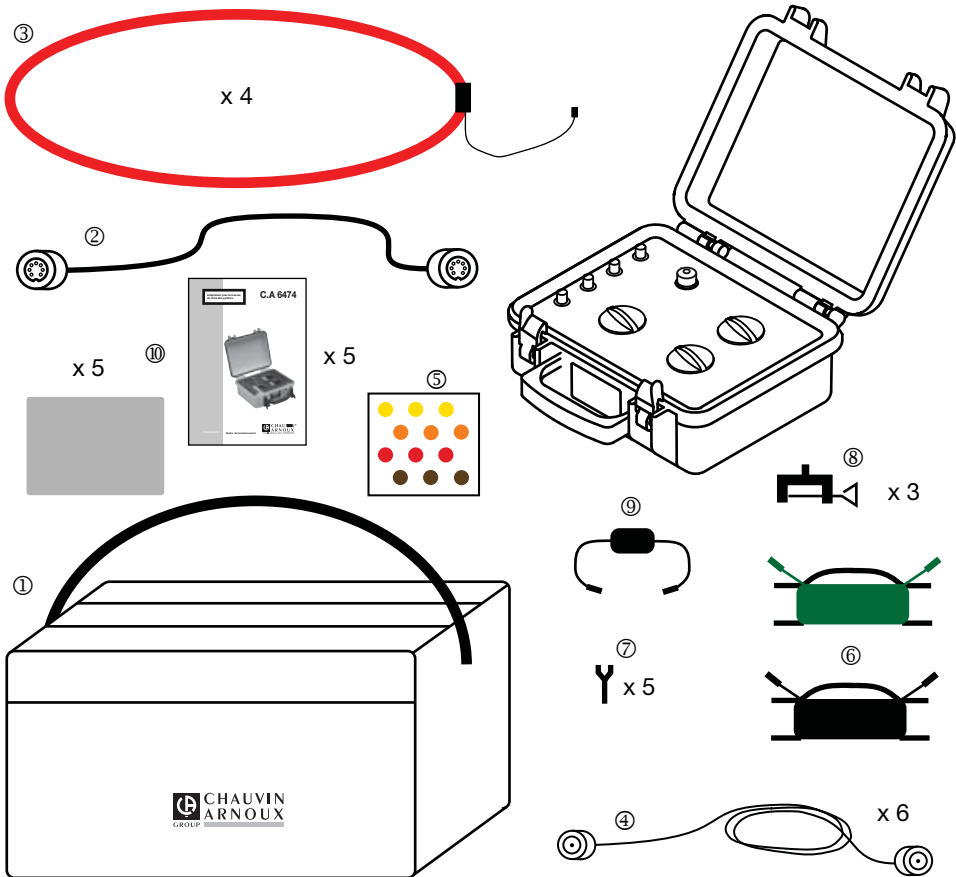


2.2. DESCRIPTION OF THE ACCESSORIES

- ① Shoulder bag that can hold the instrument and all accessories.
- ② 1 connecting lead.
This lead connects the C.A 6472 to the C.A 6474. It enables communication between the 2 instruments and powers the C.A 6474 from the C.A 6472.
- ③ 4 flexible current sensors (AmpFLEX).
You can connect from 1 to 4 sensors on the C.A 6474 according to the earthing structure considered. These sensors enable selective measurement of the current used to calculate the earthing resistance value.
Check that each sensor has an identification ring to identify the input channel on the C.A 6474 to which each sensor must be connected. If not, please refer to the C.A 6472 user manual to establish identification.
- ④ 6 x BNC/BNC cables, 15 metres long.
These cables enable the sensors to be connected to the C.A 6474 up to a distance of 30 metres.
- ⑤ 1 set of identification rings.
These rings should be mounted on BNC/BNC cables to enable the current sensor to be identified up to the connection to the C.A 6474.
- ⑥ 2 cables, 5 meters long, black and green.
These cables are to be used to connect the "E" and "ES" terminals of the C.A 6472 to the structure being tested via clamps.
- ⑦ 5 slotted tongue terminals.
2 slotted tongue terminals are to be screwed onto the above cables. The terminals are then screwed onto the clamps to ensure the connection is stable and efficient.
- ⑧ 3 clamps.
These clamps are equipped with a retention pin to ensure a stable electrical connection by eliminating corrosion or paint present in the metal contact part.
- ⑨ 1 calibration loop.
This enables the user to verify and/or calibrate the AmpFLEX sensors and confirm or obtain their identification in relation to the measurement channel used. Please refer to the C.A 6472 user manual for the operating procedure.
- ⑩ 5 user manuals and 5 characteristics labels, each in a different language.

2.3. CHARACTERISTICS LABEL

Stick one of the 5 characteristics labels supplied, in the appropriate language, inside the instrument lid.

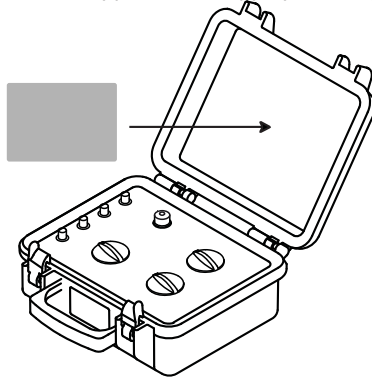

3. PROCEDURE

Use of the C.A 6474 adapter and accessories, associated with the C.A 6472, is described in detail in the C.A 6472 user manual.

4. TECHNICAL CHARACTERISTICS

4.1. REFERENCE CONDITIONS

Influence quantities	Reference values
Temperature	20 ± 3 °C
Relative humidity	45 to 55% RH
Supply voltage (1)	9 to 11.2 V
Input signal frequency range	45 to 450 Hz
Electrical field	< 1 V/m
Magnetic field	< 40 A/m

(1) This supply voltage is provided by the C.A 6472 to which the C.A 6474 is connected.

4.2. ENVIRONMENTAL CONDITIONS

For indoor and outdoor use.

Range of use	0 to +50 °C	0 to 75% RH
Storage (without battery)	-40 to +70 °C	0 to 90% RH
Altitude	< 3,000 m	
Degree of pollution	2	

4.3. ELECTRICAL CHARACTERISTICS

Operating range	1 mA to 100 A AC
Specified measurement range	10 mA to 100 A AC
Operating frequency:	41 to 5078 Hz
Characteristics of AmpFLEX sensors	0.94 $\mu\text{V}/\text{A}\cdot\text{Hz}$ i.e. 47 $\mu\text{V}/\text{A}$ at 50 Hz
Measurement accuracy values (after calibration)	2% of the reading \pm 0.5 mA or 2mA (the higher of the 2) in the range 45 to 450 Hz

Transfer ratio according to the sensitivity chosen (\pm 15%):

- S x 10 1.6 V/A (1.6 mV/mA)
- S x 1 0.157 V/A (157 $\mu\text{V}/\text{mA}$)
- S x 1/10 12.2 mV/A (12.2 $\mu\text{V}/\text{mA}$)

The complete characteristics of the C.A 6474 associated with the C.A 6472 are indicated in the C.A 6472 user manual.

4.4. COMPLIANCE WITH INTERNATIONAL NORMS

The voltages used for this accessory are not dangerous for the user. The C.A 6474 associated with the C.A 6472 satisfies the security criteria of the IEC 61010-1 standard, 61010, IEC 61557 parts 1, 4, 5.

Assigned characteristics: measurement category IV, 50 V in relation to the earth, maximum voltage of 15 V on inputs.

4.5. ELECTROMAGNETIC COMPATIBILITY (EMC)


The C.A 6474, associated with the C.A 6472, complies with EMC and LVD (low voltage) directives necessary for EC marking, as well as with the EN 61326-1 standard:

- Emission of interference in residential environments
- Immunity to interference in industrial environments

4.6. MECHANICAL CHARACTERISTICS

Dimensions (L x W x H)	273 x 247 x 128 mm
Weight	approx. 2.3 kg
Protection index	IP 53 per NF EN 60529 IK 04 as per NF EN 50102

5. MAINTENANCE

 For maintenance, use only the specified spare parts. The manufacturer cannot accept any responsibility for accidents occurring following repairs carried out outside its after-sales department or approved maintenance network.

5.1. CLEANING

Use a soft cloth slightly moistened with soapy water. Rinse with a wet cloth and dry quickly with a dry cloth or pulsed air. Do not use alcohol, solvents or hydrocarbons.

5.2. CALIBRATION TESTING

Like all measuring or testing devices, the instrument must be checked regularly.

This instrument should be checked at least once a year. For checking and calibration, contact one of our accredited metrology laboratories (information and contact details available on request), at our Chauvin Arnoux subsidiary or the branch in your country.

5.3. REPAIR

For all repairs before or after expiry of warranty, please return the device to your distributor.

6. WARRANTY

Unless expressly stipulated, our guarantee runs for **twelve months** after supply of the equipment. Extract from our General Terms and Conditions of Sale on request.

The warranty does not apply in the event of:

- Inappropriate use of the equipment or use with incompatible equipment;
- Modifications to the equipment without the explicit authorisation of the manufacturer's Technical Department;
- Work carried out on the instrument by a person not approved by the manufacturer;
- Adaptation for a specific application, not included in the definition of the equipment or the user manual;
- Damage due to impact, falls or flooding.